



Secondary Standoffs Instructions and Owners Manual

Fishmaster, Inc.
www.Fishmaster.com
Support@Fishmaster.com

Phone: 877-777-8693
Fax: 877-437-6210

THANK YOU FOR YOUR BUSINESS. IF YOU ARE NOT COMPLETELY SATISFIED IN ANY WAY WITH YOUR NEW SECONDARY STANDOFFS, PLEASE CONTACT US. Our entire purpose as a company is to offer great products at affordable prices that our customers love.

Please take a few minutes to read the installation instructions and become familiar with the Secondary Standoffs and installation before beginning to ensure a high quality, trouble free installation and use. If you have any questions during your installation give us a call at 877-777-8693 or e-mail Support@Fishmaster.com

IMPORTANT NOTES ON INSTALLING AND USING YOUR NEW SECONDARY STANDOFFS

- Read entire manual before installation
- Grease all bolts
- Check bolts after first few uses and retighten when needed

Fishmaster, Inc Warranty

Fishmaster warrants this product against manufactures defects for a period of five (5) years. Anodized surfaces are specifically excluded, as their care and use cannot be controlled by the manufacturer. Any modifications or improper use, not approved in writing by Fishmaster shall void this warranty. Fishmaster is not responsible for personal injury or damage to the boat caused by the use of this product. Fishmaster's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. If you need to make a warranty claim contact Fishmaster at 877-777-Tower to receive a return authorization number which is required for all claims. Defects must be reported within 30 days of discovery.

Fishmaster Secondary Standoffs Parts List



Stand Offs Broken Down




Stand Offs Assembled

Item	Description
4 Delrin Spacers	Provides contoured fit onto side upright or cross tube
2 Acorn Nuts	Attaches to the outside of the threaded rod and spacers
2 Threaded Rods	Secures the side upright to the console
2 Spacer Tubes	Cut to length to provide standoff support to the console
2 Large Washers	Goes inside of console to support the threaded rod
2 Nuts	Fastens the threaded rod and standoff to the console

INSTALLATION


Note the parts of the standoff assembly in the photo below.

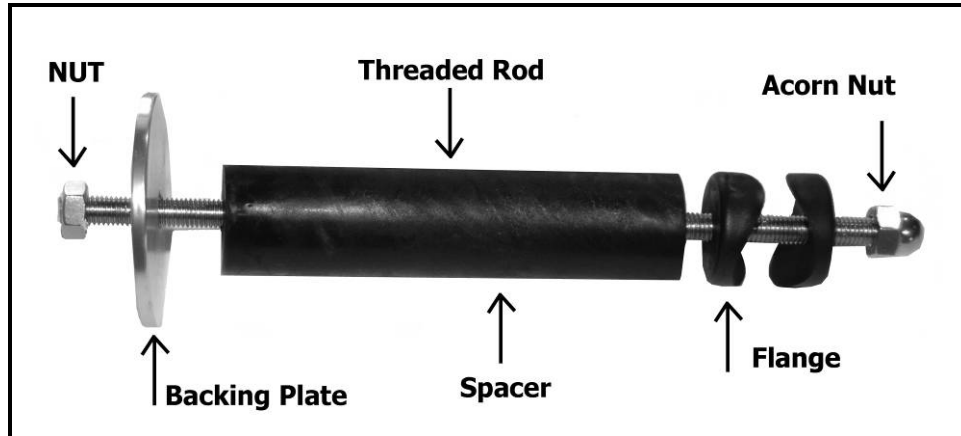

Locate the position you would like to install the secondary standoff on each side of the console.



Look under the console to determine a location suitable for the backing plate shown below, avoiding any wiring or obstructions under the center console.

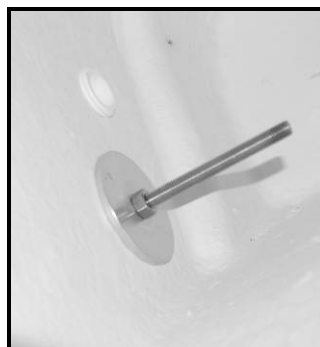

View of Threaded Rod inside Console

This shows that there are no wires or electronics that may interfere with the standoff installation.



Use the 3/8" bit to drill through the T-Top leg and center console as shown. Use a center punch to locate the hole on the tube and drill first with the 11/64" bit. If needed you can drill the hole in the console from above and below the cross tube. If you do this first drill from both directions with the 11/64" bit then both directions with the 3/8" bit.



Measure for the spacer making sure the leg is vertical using a level. Cut the spacer to fit and remember it's easier to cut or sand a little more material off then to add a washer.

Complete the first standoff installation **using Loctite** tightening both the Acorn Nut and Backing Plate Nut.

Follow the same directions to complete the standoff installation on the other side of the console ensuring the leg is vertical.