




BoatBuckle®

TRANSOM RETRACTABLE TIE-DOWN SYSTEM

INSTALLATION INSTRUCTIONS:

1. Use trailer's existing mounting tab, or drill 7/16" hole into trailer frame. (IMPORTANT: Before drilling, contact your trailer manufacturer to ensure of proper and safe mounting locations for your trailer.) Be sure the tie-down point is between 12" - 41" from mounting hole. Do not mount unit otherwise. See Cautions.
2. Using bolt, washer and locknut provided, attach BoatBuckle to trailer frame (Figure 1). Before tightening, the BoatBuckle should be swiveled left or right to ensure a straight-line pull to the transom eye (Figure 2). Once in line, tighten securely. Do not over tighten bolt. Over tightening the bolt may deform the box channel on the trailer or BoatBuckle frame. (Maximum recommended torque: 45ft. lbs.)
3. BoatBuckle should be mounted to trailer frame in such a position to enable the web to have as much of a straight-line pull as possible (Figure 3). Web angle should not exceed a +/- 30 degree angle (forward or back) from vertical when in use. (See Figure 4 inside).

If you are unable to obtain the proper mounting angle, the BoatBuckle Universal Mounting Bracket Kit (p/n F14254) is advised. Purchase separately.

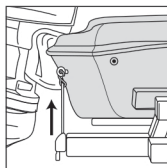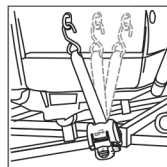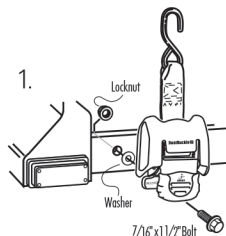

IMMI®

18881 U.S. 31 North
Westfield, IN 46074-0408
888-937-4626
outdoor@imminet.com
www.boatbuckle.com

4826M 926144C Patent No. 5,282,706
Engineered, Designed & Tested in the U.S.A. Made in Taiwan.



SEE OPERATING INSTRUCTIONS AND CAUTIONS INSIDE

Vea las instrucciones y los cuidados
operadores adentro
Voir les instructions d'opération et les
prudences à l'intérieur

PEEL HERE