



# HOW TO REPACK YOUR REEF MAT

## DEFLATION



Find a flat surface free of sharp objects.



Remove the valve cover and push the valve stem in to deflate.

Use the pump to fully exhaust air for folding. Attach the hose to the **IN** port on the pump for deflation.




Fully dry with a soft cloth to prevent mold and mildew build up.




Close valve by tapping stem to keep flat after deflation.

## FOLDING DO NOT ROLL!

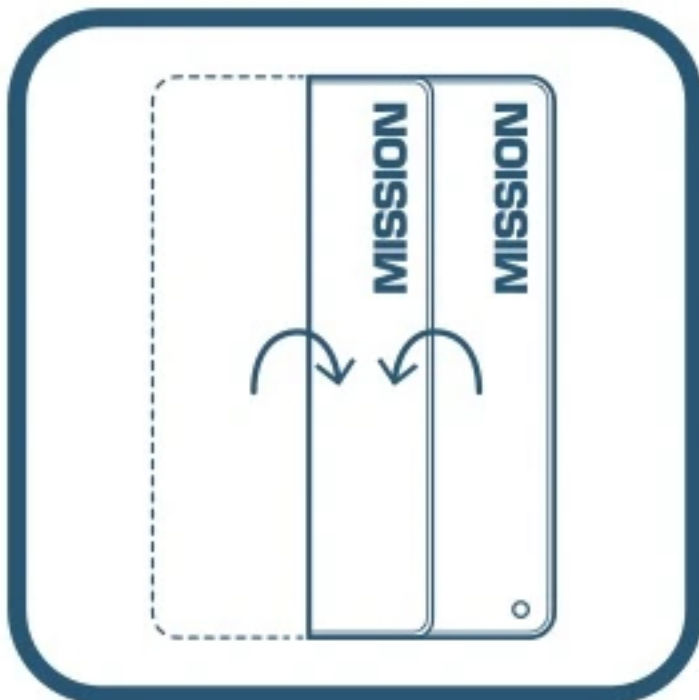

Fold into thirds the long way.

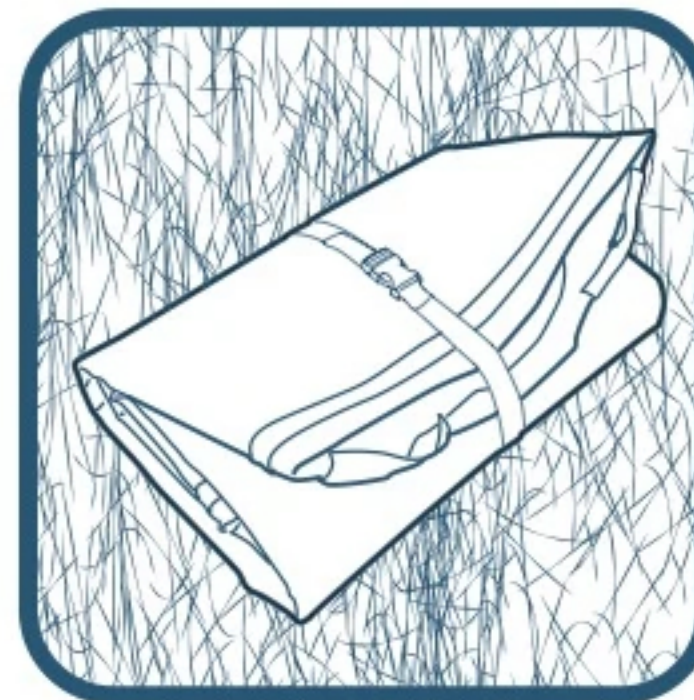

Continue for full length of mat and secure with included strap.



Loosely fold in approximately 12" sections.



Stow in the protective bag for maximum protection.